

FEMALE CONCEALABLE SIZING FORM

3120 E. Mission Blvd., Ontario, CA 91761

Toll Free: 800-347-1200 Toll Free Fax: 800-366-1669

Email: customercare.bodyarmor@baesystems.com

PLEASE PRINT OFFICER'S FULL NAME			BADGE NO	_
DEPARTMENT			TELEPHONE NO. (_
SHIPPING ADDRESS			DISTRIBUTOR'S	-
CITY	STATE	ZIP	NAME	_
MEASURED BY:			DATE OF MEASURE:	_
		1	f ABA :	

ORDER INFORMATION

Semi-Structured Armor Models (NIJ-06)

☐ Xtreme HP01F

☐ Xtreme XT01F

Unstructured Armor Models (NIJ-06)

☐ Xtreme FX01 ☐ Xtreme HP01

☐ Xtreme XT01

Unstructured Armor Models (NIJ 05 IR)

☐ Xtreme Force

☐ Xtreme HP ☐ Gold

☐ Bronze

☐ Silver 6.0

Threat Type (Level)			
Carrier Style			
☐ Universal AJ			
☐ Universal AJ FRP*			
☐ Universal AJ Polycotton			
☐ Universal AJ Polycotton FRP*			
* FRP indicates carrier is equipped with front and rear plate pockets.			
Color			
☐ Black ☐ Navy			
☐ White ☐ Olive			

☐ Brown ☐ Tan ☐ Grav

COMMENTS:

Use the following measurements to properly fit a female, ABA structured, unstructured or semi-structured vest.

2 WEIGHT:

3 BRA/CUP SIZE:

For sports bra, check here if you would like cup size reduced by one full size

FULL CHEST


TOTAL WAIST

CENTER TOP TORSO

CENTER BOTTOM TORSO

SIDE FRONT TORSO

CENTER BACK LENGTH

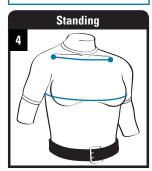


FULL CHEST

Allow her to place the tape across the breast line. Measure the full circumference of the body across the mid-breast line.

UPPER CHEST


With arms extended forward, measure from bra strap to bra strap 1" under the clavicle notch.

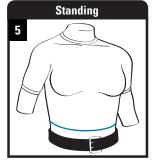

TOTAL WAIST


Measure the waist at the widest circumference in between the chest and the top of the duty belt. Check the box for the desired overlap and then add the overlap to the waist measurement to achieve "total waist" measurement.

- Butt Fit
- add 1" to the waist measurement
- ☐ 1" Overlap
- add 3" to the waist measurement
- 2" Overlap add 5" to the waist measurement

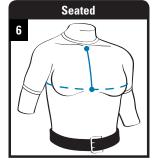


CENTER TOP TORSO

Identify the clavicle notch. Measure from the base of the clavicle notch, down to the mid-breast bone. Subtract 1" from this measurement.

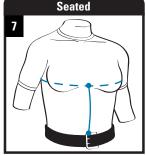

CENTER BOTTOM TORSO

Measure from the mid-breast bone to the top of the duty belt.

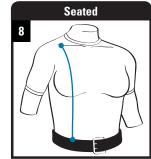

SIDE FRONT TORSO

Identify the top edge of the clavicle bone. Placing the tape measure under the bone, measure from this point down to the top of the duty belt. Subtract 1" from this measurement.



CENTER BACK LENGTH

Identify the bottom edge of the shirt collar. Measure from the bottom edge of the shirt collar to the top of the duty belt. Once you have achieved this measurement, multiply that measurement by .80 (80%).

UPPER CHEST	

	WAIST	
+	OVERLAP	
=	TOTAL WAIST	

TOP TORSO	
- ONE INCH	1"
= TOP TORSO	

FRONT TORSO	
- ONE INCH	1"
= FRONT TORSO	

BACK LENGTH	
× 80 PERCENT	80
= BACK LENGTH	